# MECHANICAL REBAR COUPLER









# **MECHANICAL REINFORCING BAR SPLICING SYSTEM**

# **barCOUP** Coupler

## **Properties**

- Meets or exceeds the requirements of major international building codes
- ➤ A wide range of international rebar grades and deformation patterns can be used
- Upset Parallel Thread System eliminates losing of connection strength via slipping
- Installs easily and fast
- ► Slim design reduces concrete cover
- Available in sizes 12 mm 40 mm
- Allows simple visual inspection



Barcoup Couplers are designed to splice the same diameter bars where at least one bar can be rotated and moved freely in its axial direction. The couplers are machined to have parallel threads inside which create a mechanical connection of two corresponding reinforcing steel.

Typical applications include splicing of the column bars (or shearwalls), splicing of the beam bars, future extensions and segmental pours of concrete.



Barcoup couplers are designed to meet or exceed major international building codes and Department of Transportation requirements, including:

AASHTO	ACI 349	IBC Type 1 (125% Specified Yield)	NF A 35-020-1
ABNT NBR 8548:1984	ACI 359	IBC Type 2 (Specified Ultimate)	NF EN 1992-1-1
ACI 318 Type 1 (125% Specified Yield)	AS3600	ISO 15835	Turkish Seismic Code 2018
ACI 318 Type 2 (Specified Ultimate)	Eurocode 2	GOST 34278	US Army Corps of Engineers

#### **HEADQUARTERS**

Caferağa Mah. Albay Faik Sözdener Cad. No:7/23 Kadıköy - İstanbul - TURKEY **Phone:** +90 216 405 21 55 pbx **E-mail:** info@regbar.com

#### **PLANT**

Sanayi Mah. İzmit Sanayi Sitesi 13. Cadde 318 Blok Apt. No: 318/132 No:9 İzmit - Kocaeli - TURKEY **Mobile:** +90 541 932 37 51

#### **RUSSIA BRANCH**

Lesnaya Plaza 4, 4th Lesnoy Pereulok No: 24/8 125047 Moscow / RUSSIA













# Simple Installation







2. Screw the coupler on the threaded bar.



**3.** Align the corresponding rebar. Rotate the rebar to the middle of coupler.

	Bar Sizes		Outside Diameter (*)		Length		Unit Weight (*)		
Product Code	Metric [mm]	US	Canada	[mm]	["]	[mm]	["]	[kg]	[lb]
BRCP12	12	#4	10M	19	3/4	38	1-1/2	0.05	0.12
BRCP14	14	-	-	24	15/16	42	1-21/32	0.09	0.2
BRCP16	16	#5	15M	29	1-9/64	47	1-27/32	0.14	0.31
BRCP18	18	-	-	34	1-11/32	50	1-31/32	0.21	0.47
BRCP20	20	#6	20M	34	1-11/32	54	2-1/8	0.22	0.49
BRCP22	22	#7	-	39	1-17/32	58	2-9/32	0.28	0.62
BRCP26	26	#8	25M	39	1-17/32	60	2-23/64	0.29	0.64
BRCP28	28	#9	30M	44	1-47/64	68	2-43/64	0.42	0.93
BRCP30	30	-	-	49	1-59/64	70	2-3/4	0.57	1.26
BRCP32	32	#10	-	49	1-59/64	72	2-53/64	0.58	1.28
BRCP36	36	#11	35M	54	2-1/8	78	3-5/64	0.78	1.72
BRCP40	40	-	-	59	2-21/64	80	3-5/32	0.91	2.01

(\*) Bar diameters and weights may vary by country.

#### **NOTES**

- Dimensions shown in chart are typical.
- It is recommended to lock the splices using a wrench. No specific torque needed.
- It is recommended to store away the thread protecting caps for reuse.
- Refer to the complete product installation instructions before starting the installation.



#### **HEADQUARTERS**

Caferağa Mah. Albay Faik Sözdener Cad. No:7/23 Kadıköy - İstanbul - TURKEY **Phone:** +90 216 405 21 55 pbx **E-mail:** info@regbar.com

#### **PLANT**

Sanayi Mah. İzmit Sanayi Sitesi 13. Cadde 318 Blok Apt. No: 318/132 No:9 İzmit - Kocaeli - TURKEY **Mobile:** +90 541 932 37 51

#### **RUSSIA BRANCH**

Lesnaya Plaza 4, 4th Lesnoy Pereulok No: 24/8 125047 Moscow / RUSSIA













www.**regbar**.com info@regbar.com

### **HEADQUARTERS**

Caferağa Mah. Albay Faik Sözdener Cad. No:7/23 Kadıköy - İstanbul - TURKEY **Phone:** +90 216 405 21 55 pbx

E-mail: info@regbar.com

### **PLANT**

Sanayi Mah. İzmit Sanayi Sitesi 13. Cadde 318 Blok Apt. No: 318/132 No:9 İzmit - Kocaeli - TURKEY **Mobile:** +90 541 932 37 51

# **RUSSIA BRANCH**

Lesnaya Plaza 4, 4th Lesnoy Pereulok No: 24/8 125047 Moscow / RUSSIA