

## MECHANICAL REINFORCING BAR SPLICING SYSTEM

# posCOUP Coupler

#### **PROPERTIES**

- Meets or exceeds the requirements of major international building codes
- A wide range of international rebar grades and deformation patterns can be used
- Can be used for splicing pre-fabricated cages
- Installs easily and fast
- Slim design reduces concrete cover
- Available in sizes 12 mm 40 mm
- Allows simple visual inspection



Poscoup Couplers are designed to splice the same diameter bars where at least one bar is not free to rotate. The couplers are machined to have parallel threads inside which create a mechanical connection of two corresponding reinforcing steel.

These rebars which will be connected are put together in site for mounting and the mounting is completed only by screwing the coupler by hand from right to left (with no need for extra torque wrench and controlling device). Typical applications include splicing of the column bars (or shearwalls), splicing of the beam bars, staircase connections.

Poscoup couplers are designed to meet or exceed major international building codes including:

AASHTO ACI 349 IBC Type 1 NF A 35-020-1

(125% Specified Yield)

ABNT NBR 8548:1984 ACI 359 IBC Type 2 NF EN 1992-1-1

(Specified Ultimate)

ACI 318 Type 1 AS3600 ISO 15835 Turkish Seismic Code

(125% Specified Yield)

2018

ACI 318 Type 2 Eurocode 2 GOST 34278 US Army Corps of

Engineers

**HEADQUARTERS** 

Caferağa Mah. Albay Faik Sözdener Cad. No:7/23 Kadıkoy- Istanbul / TURKEY Phone: +90 216 405 21 55 / PBX info@regbar.com

**PLANT** 

Sanayi Mah. İzmit Sanayi Sitesi 13. Cadde 318 Blok Apt. No:318/132 No:9 İzmit-Kocaeli / TURKEY Mobile:+90 541 932 3751

#### **RUSSIA BRANCH:**

Lesnaya Plaza 4, 4th, Lesnoy Pereulok No:24/8125047 Moscow / RUSSIA W: +7 (495) 641 37 64





(Specified Ultimate)



#### SIMPLE INSTALLATION



1. Remove the protecting concrete and thread cap from the rebar to be connected.



2. Align the corresponding two rebar. Screw the coupler and the nut from where it is mounted to the other threaded bar.

		Bar Sizes		Outside Diameter (*)		Length		Unit Weight (*)	
Product Code	Metric [mm]	US	Canada	[mm]	["]	[mm]	["]	[kg]	[lb]
PSCP12	12	#4	10M	19	3/4	38	1-1/2	0.05	0.12
PSCP14	14	-	-	24	15/16	42	1-21/32	0.09	0.2
PSCP16	16	#5	15M	29	1-9/64	47	1-27/32	0.14	0.31
PSCP18	18	-	-	34	1-11/32	50	1-31/32	0.21	0.47
PSCP20	20	#6	20M	34	1-11/32	54	2-1/8	0.22	0.49
PSCP22	22	#7	-	39	1-17/32	58	2-9/32	0.28	0.62
PSCP26	26	#8	25M	39	1-17/32	66	2-19/32	0.29	0.64
PSCP28	28	#9	30M	44	1-47/64	68	2-43/64	0.42	0.93
PSCP30	30	-	-	49	1-59/64	70	2-3/4	0.57	1.26
PSCP32	32	#10	-	49	1-59/64	72	2-53/64	0.58	1.28
PSCP36	36	#11	35M	54	2-1/8	82	3-15/64	0.78	1.72
PSCP40	40	-	-	59	2-21/64	90	3-35/64	0.91	2.01

(\*) Bar diameters and weights may vary by country.

### **NOTES**

- Dimensions shown in chart are typical.
- It is recommended to lock the splices using a wrench. No specific torque needed.
- It is recommended to store away the thread protecting caps for reuse.
- Refer to the complete product installation instructions before starting the installation.

Regbar Construction Reinforcing Bar Splicing System http://tiny.cc/regbar



#### **HEADQUARTERS**

Caferağa Mah. Albay Faik Sözdener Cad. No:7/23 Kadıkoy- Istanbul / TURKEY Phone : +90 216 405 21 55 / PBX info@regbar.com

## PLANT

Sanayi Mah. İzmit Sanayi Sitesi 13. Cadde 318 Blok Apt. No:318/132 No:9 İzmit-Kocaeli / TURKEY Mobile: +90 541 932 3751

#### **RUSSIA BRANCH:**

Lesnaya Plaza 4, 4th, Lesnoy Pereulok No:24/8125047 Moscow / RUSSIA W: +7 (495) 641 37 64





